


Revisions Control			
Rev.	Descriptions	Date	App'd
1			
2			
3			

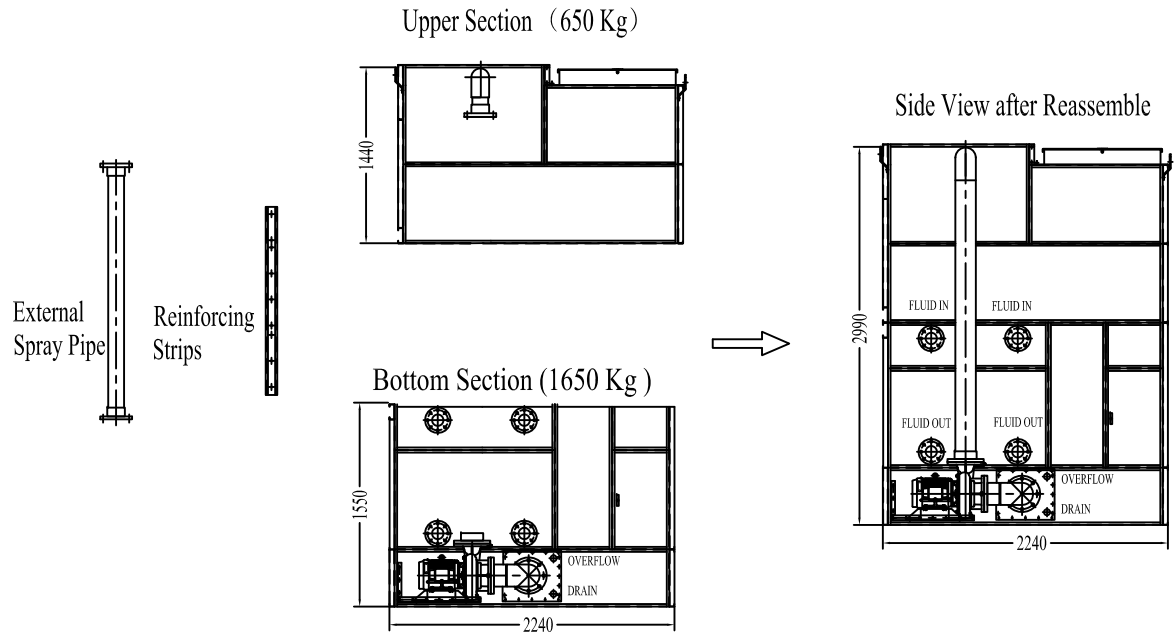


Reassemble Guides:

The tower is separated into upper section and bottom section when ex-work to load into the containers, please follow the below instructions to reassemble the tower at site:

- Step I. Cover the Jointing Interface of the Bottom Section with the special sealant plaster that provided with the towers when ex-work, but avoid blocking the holes for fasteners pass;
- Step II. Set the Upper Section onto the Bottom Section, necessary to operate this process with a suitable crane. Then lock the two sections with fasteners of size M8*16;
- Step III. Put on all the Reinforcing Strips, lock with fasteners M8*16, then put on the External Spay Pipe, lock with fasteners M16*90.

Top View of Bottom Section (Jointing Interface)

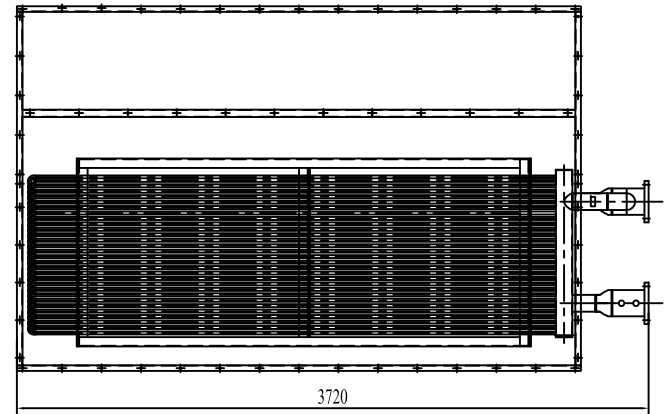

Unless otherwise specified, Dimensions are in millimeters.		Customer: APPLIED AIR SERVICES		Debur and break sharp edges		Do not scale drawing		Rev. No.: 00	
						SANJIUCOOLINGEQUIPMENT			
Drawn: Zhang Huan		Signature		Date: 2015.12.15		Product: GHM-110C			
Check: Angela Luo				2015.12.15		Reassemble Drawing of GHM-110C			
App'd: Xu Tao				2015.12.15					
						Drw No.		A3	
				Material:		SJAAS151215-01b			
						Scale: 1:1		Sheef 1 of 1	